

New Battery Long Condition

Use for:
 ♦ first use of new battery
 ♦ poor battery performance
 ♦ after 2+ weeks storage


1 Turn the radio off



2 Press and hold the button




3 Insert the battery and/or radio into the charger

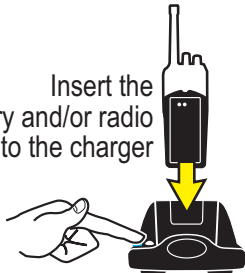

4 Wait for the amber light flashing



5 Release the button

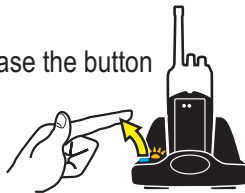

6



Long
Conditioning



steady



100%
Charged




up to
24 hours



Battery Charger User Guide



Before being fitted to a radio, a new (or stored) battery **must** be fully charged using the Long Condition cycle. Refer to "New Battery - Long Condition".

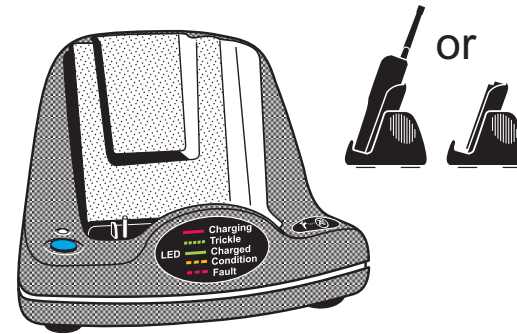

Error Conditions

flashing



battery fault - check the contacts

slow flash

 


power supply failure

steady



out of temperature range



©Tait Electronics Limited
www.taitworld.com/orca



Printed in New Zealand MBAT4-00-000-804

Normal Charging

Use for:
◆ normal battery recharge


- 1 Turn the radio off



- 2 Insert the battery and/or radio into the charger



- 3

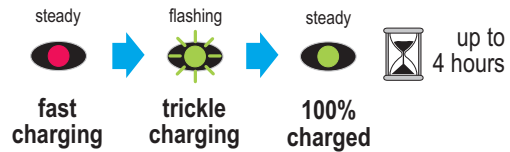

Weekly Maintenance Short Condition

Use for:
◆ weekly maintenance charging

If interrupted, begin from 1

- 1 Turn the radio off



- 2 Insert the battery or radio into the charger



- 3 Wait for the red light




- 4 Press the button



- 5 Wait for the amber light



- 6 Release the button

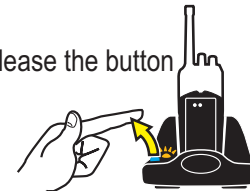

- 7

